





Cutting and installation of Trapez-Pack® Packing

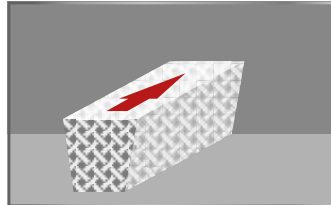

Installation


The rings must be installed always with the marked side to the housing and in sense of rotation.

Straight (Butt) cut 75° for rotating shafts

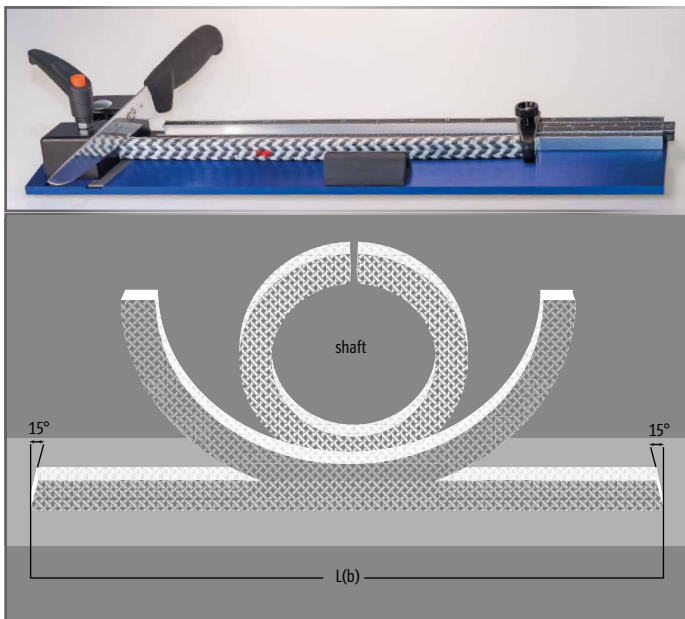


Cut 1

- Put the packing on the cutter base with the red arrow marking oriented to the operator.
- Cut as shown in fig. 1

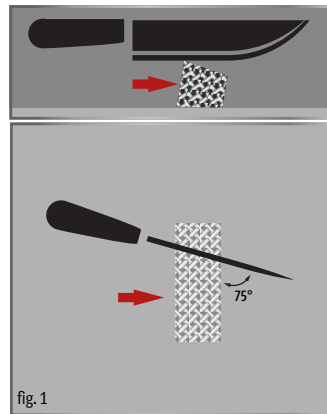


Cut 2

- Turn the packing over by 180°
- Adjust the exact cutting length L(b)
- Cut as shown in fig. 2

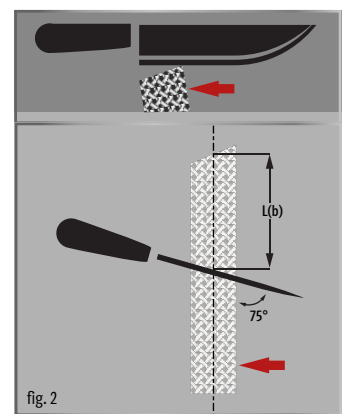


Diagonal (Skive) cut 45° for valves and piston pumps

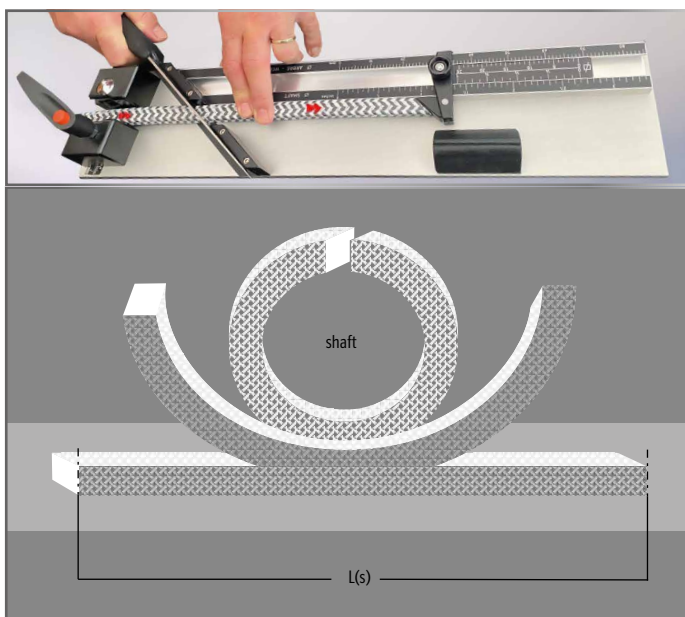

Cut 1

- Put the packing on the cutter base with the red arrow mark facing up.
- Cut as shown in fig. 3

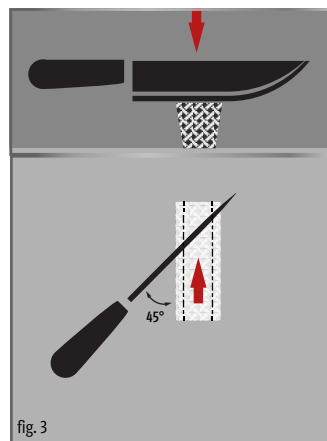

Cut 2

- Adjust the exact cutting length L(s)
- Cut as shown in fig. 4

